



SPX Corporation
655 Eisenhower Drive
Owatonna, MN 55060-0995 USA
Phone: (507) 455-7000
Tech. Serv.: (800) 533-6127
Fax: (800) 955-8329
Order Entry: (800) 533-6127
Fax: (800) 283-8665
International Sales: (507) 455-7223
Fax: (507) 455-7063

Form No. 107187


Operating Instructions
for:

1774A

Jack Stand

Max. Capacity: 10 Tons

These jack stands are designed to be used in pairs to support a load after it has been lifted by a suitable lifting device.

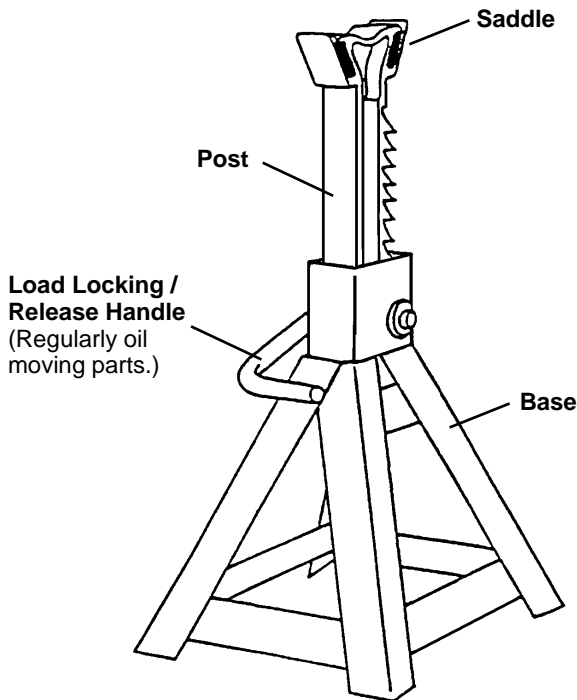

Safety Precautions



Caution: To prevent loss of load or damage to equipment resulting in personal injury :

- Read, understand, and follow these instructions.
- Wear eye protection that meets the requirements of ANSI Z87.1 and OSHA.
- Inspect the condition of the jack stands before each use; do not use a jack stand if it's damaged, altered, or in poor condition.
- Use the jack stands in pairs on a hard, level surface. Jack stands must have solid contact between ground and vehicle.
- Center the load on the jack stand saddle.
- Do not exceed the rated capacity of the jack stand.
- Engage the ratchet with extension teeth.
- Block the vehicle wheels. Test the stability of the vehicle by gently rocking the load.

Operating Instructions

1. Set the vehicle's parking brake, and block all wheels.
2. Use a suitable lifting device to raise the vehicle to the desired height.
3. Extend each jack stand post to a height close to a vehicle support member.
4. Check the load locking / release handle on each jack; the holding dog must fully engage a tooth on the post.
5. Verify that both jack stands are at an equal height, so the load will be balanced and stable after the lifting device is removed.
6. Refer to the vehicle service manual for specified support points on the vehicle. Place the jack stands at these points.
7. SLOWLY lower the load onto the jack stands. Position the load on the center of the saddles, not on the outer lips.
8. Test the load for stability by gently rocking the vehicle. Raise and reposition the load if necessary.
9. To remove the jack stands, raise the vehicle enough to clear the jack stands. Remove the jack stands, and lower the vehicle to the floor.

Sheet No. 1 of 1

Issue Date: 1-15-02 Rev. A